



58MM Thermal Receipt Printer User Manual



Attention

- Put printer on stable surface. Choose firm, level surface where avoid vibration.
- Don't use and store printer in high temperature, high humid and serious polluted place.
- Connect power adapter properly to grounded receptacle. Avoid using the same socket with large power consumption devices that can lead to power fluctuation.
- Avoid water or other objects go into printer. Once happened, turn off printer immediately.
- Print without paper roll will damage printing head seriously.
- Unplug printer from power receptacle if do not use it for a long time.
- Only use approved accessories, never try to disassemble, repair or remodel it.
- Use standard power adapter.
- Use high quality paper, this ensures the printing quality and life of printer.
- Please turn off power before plug/ unplug cable.
- Printer is used only under 5000 meters.

 
Packing

Printer	1PC
Power cable	1PC
Power adapter	1SET
Paper roll	1ROLL

Features

70mm/s or 20 lines/s printing speed
Parallel, Serial, USB, LAN interface optional
ESC/POS compatible
Support international languages
Paper Type: Thermal Paper
Paper thickness: 0.06 to 0.07 mm
Roll diameter: max: 83.0 mm
Paper width: 58mm

Avoid order missing



High printing speed




Support international languages



Connection

- A. Connect AC power cord to power, DC power cord to printer.
- B. Connect printer and computer/ tablet.
- C. Connect cash drawer.

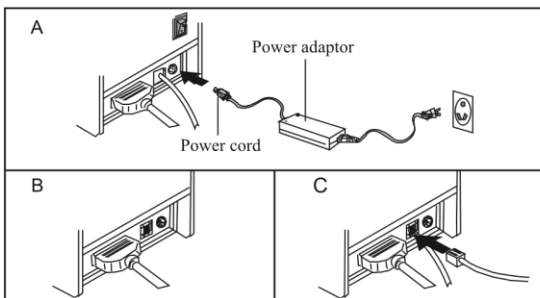

FEED button

Press to FEED paper manually

POWER indicator

Light is on means connected properly

ERROR indicator

When paper roll run out , cutter error , printing head overheat , the indicator will light.

Paper roll loading

58mm thermal paper roll recommended to 58mm series printers.

The method of paper loading is as below:

- a. Open top cover
- b. Drop paper roll in the hole as below
- c. Pull the paper into the paper holder, then close top cover
- d. Print one self-test to make sure paper correctly installed.

